




SwagTron T1 Battery Replacement

How to replace the battery of a SwagTron T1 hoverboard.

Written By: Adrian Abarca

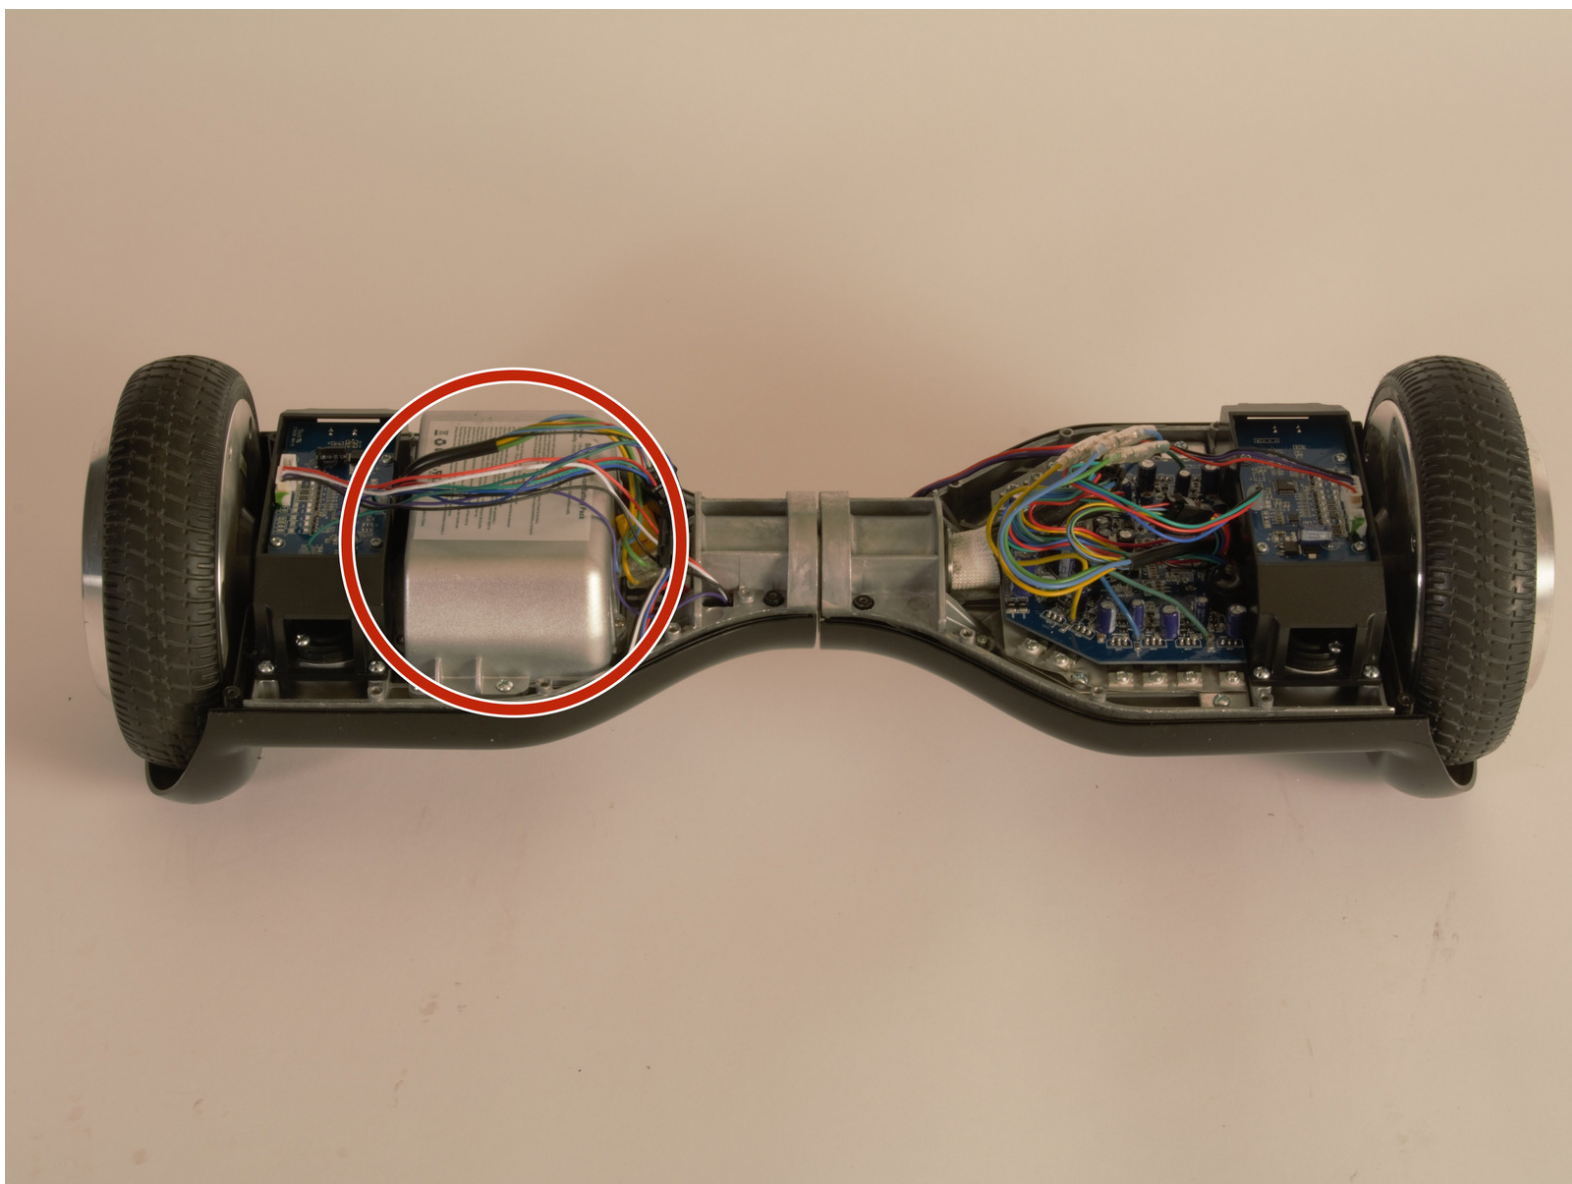

INTRODUCTION

This guide will outline how to replace the battery of your SwagTron T1 Hoverboard. This may be necessary if the battery is defective or worn out. **Before attempting this replacement, recalibrate your hoverboard.** If the issue persists, continue with this replacement.




TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-


Step 1 — Back Panels




 Ensure that the SwagTron is off.

- Turn the SwagTron upside down to see the underside.

Step 2

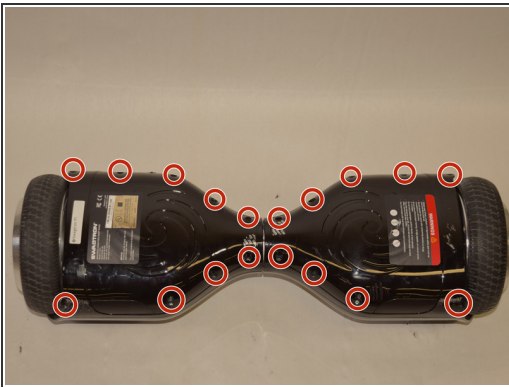


- Unscrew the eighteen 10mm screws that secure the back panels using a Phillips #2 screwdriver.

 The screws are tightly in place. It will take effort to screw them out.

 The panel is still attached to the SwagTron by wires that go to the motherboard.


- Carefully lift the panels off

Step 3

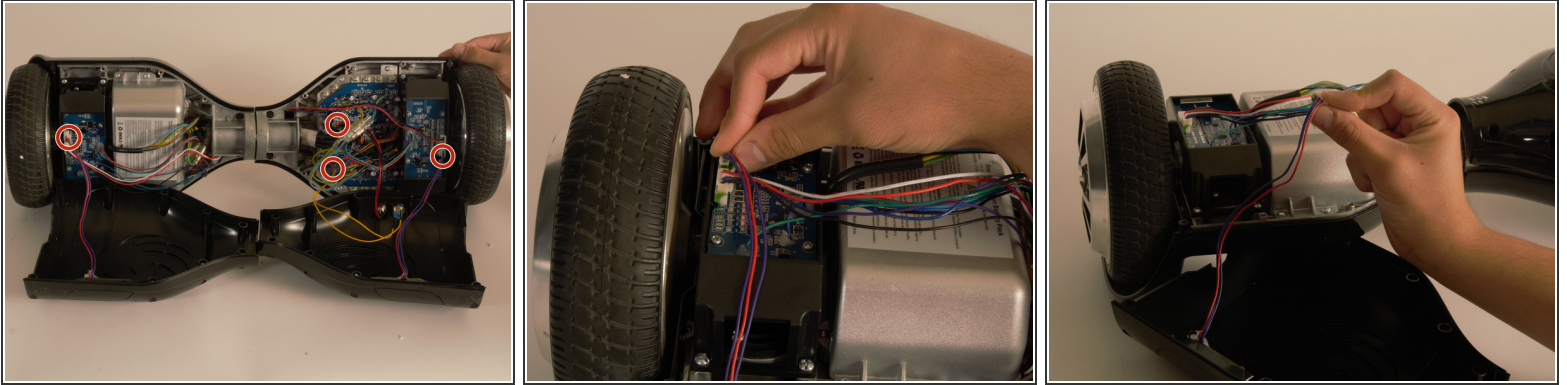



- Follow the wires from the panels to the motherboard.
 - You may need to cut any zip ties that are holding the wires together.
 - There is one connection on the battery side and three on the other side that must be removed.
- ⚠ These connections may be difficult to remove. Try to securely press the connection and pull firmly.
- Your back panels are now completely removed.

Step 4 — Battery

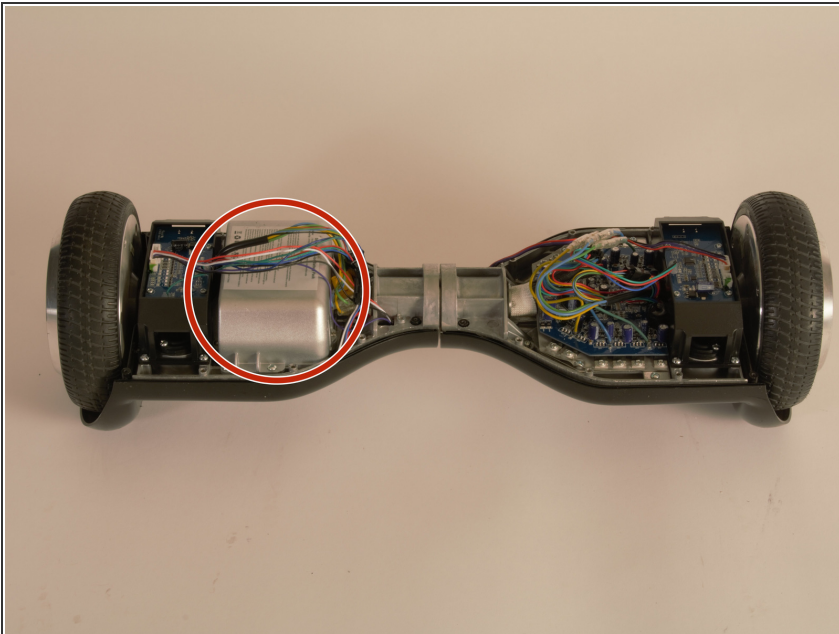


- Your SwagTron should look like this once the back panels are removed.
- The battery is located on the left side as shown.

Step 5

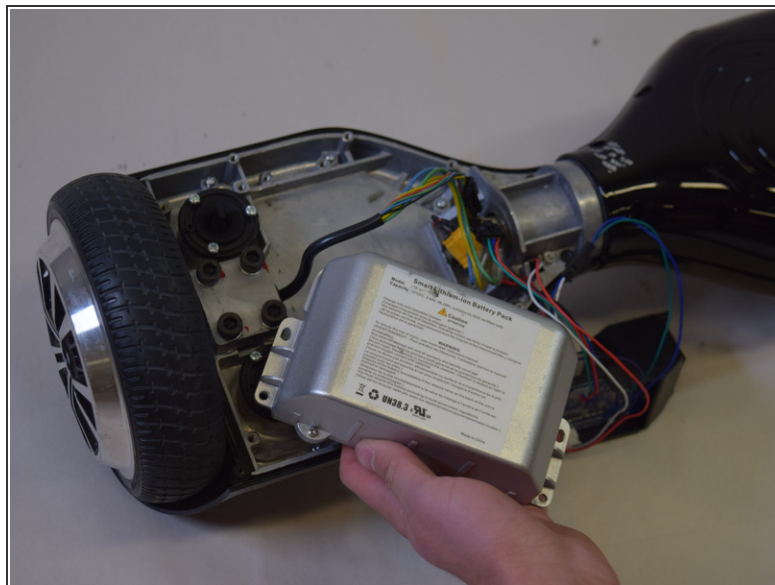
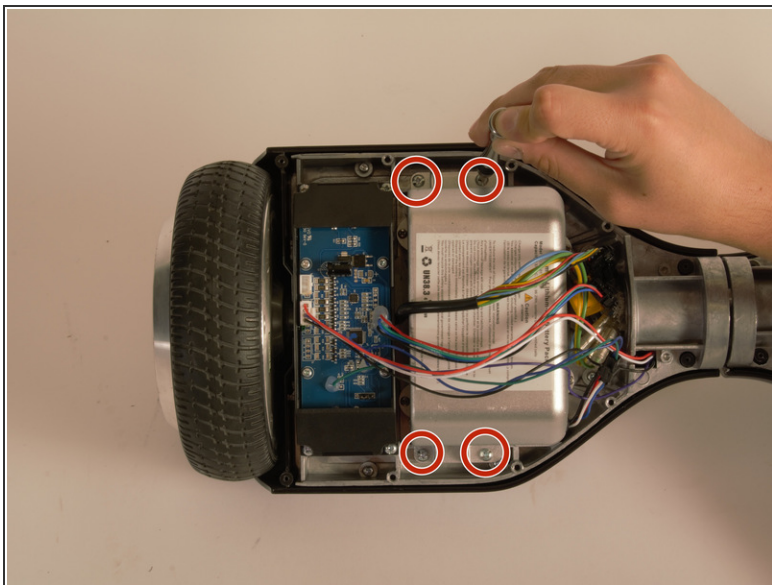


- Unscrew the four 10mm screws that secure the battery using a Philips #2 screwdriver.

 The screws may be tightly in place. If so, use some effort to unscrew them.

 The battery is still connected to two wires that go to the motherboard.

Step 6

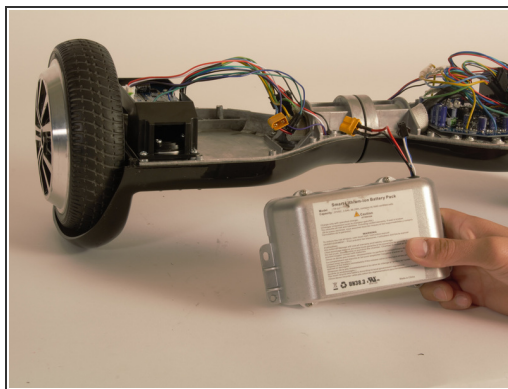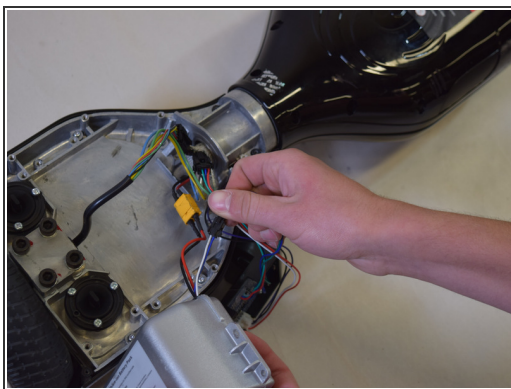

- Disconnect the two wires that come from the battery from the wires coming from the hoverboard.
- There are only two connections that need to be separated.
- The battery should be completely removed from the hoverboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 02:19:00 AM.